

WASHING INFORMATION

- Machine wash the mat separately in cold water with machine set to the delicate cycle. Do not use chlorine bleach or iron the mat. Drip dry only - do not put the mat in the dryer.
- Spot wash other included accessories with a clean, damp cloth. Do not immerse in water.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



'Let's care for the environment!'

The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236 U.S.A.
1-800-321-0183

Printed in China

MGA Entertainment UK Ltd
50 Presley Way
Crownhill
Milton Keynes
MK8 0ES
Bucks, UK
0800 521 558

www.littletikes.com
www.littletikes.co.uk

little tikes

Visit our website at www.littletikes.com to register your product and to enter our sweepstakes. (No purchase necessary)



641398 / 641404

Sway 'n Play Gym™


AGES 0+ MONTHS

ADULT SUPERVISION REQUIRED

ADULT ASSEMBLY AND BATTERY INSTALLATION REQUIRED

CONTENTS

- | | |
|-----------------------|------------------------|
| A. 1 mat | E. 1 monkey attachment |
| B. 1 arch | F. 1 toucan attachment |
| C. 1 base | G. 1 lion attachment |
| D. 1 zebra attachment | H. 1 mirror attachment |
| | I. 1 Bolster Pillow |

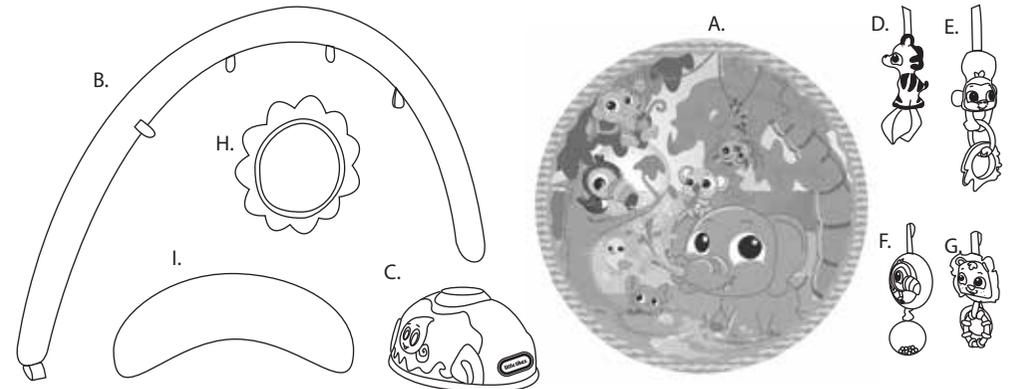

Illustrations are for reference only. Styles may vary from actual contents.

BEFORE YOU BEGIN

Before playing, an adult must install fresh alkaline batteries in the base.

Here's how:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the base.
2. Install four (4) fresh 1.5V AA (LR6) alkaline batteries (not included) in the base making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.


4 x AA Batteries

⊕ 1.5V AA/LR6 ⊖


⊖ 1.5V AA/LR6 ⊕

⊕ 1.5V AA/LR6 ⊖


⊖ 1.5V AA/LR6 ⊕

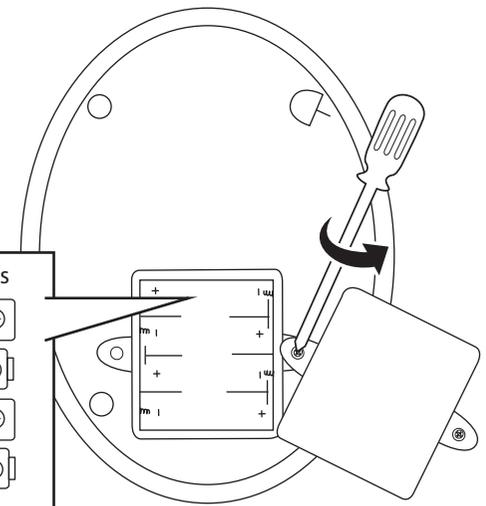


QUICK START

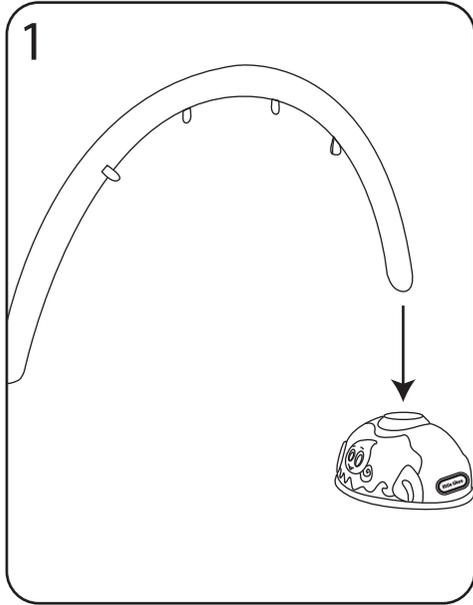


Insert one side of the arch into the opening on top of the base.

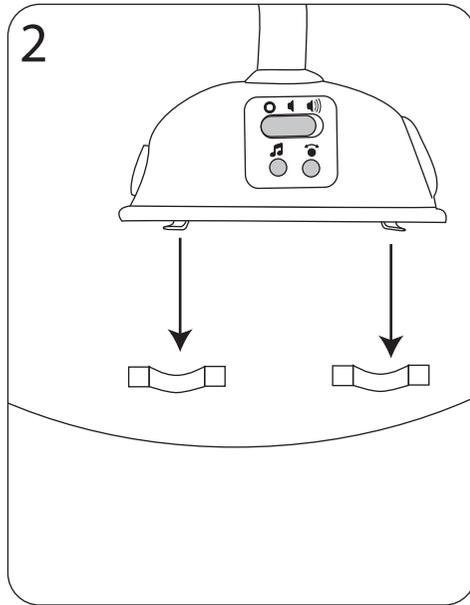


Slide the hooks underneath the base into the fabric loops on top of the mat with the switches facing the outside of the mat.

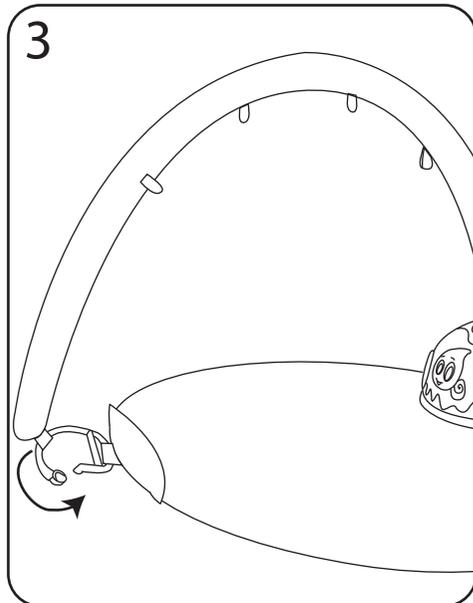

Lift up the mat and attach the clip to the arch by opening the clip and sliding it through the loop on the arch. Then, close the clip to secure.

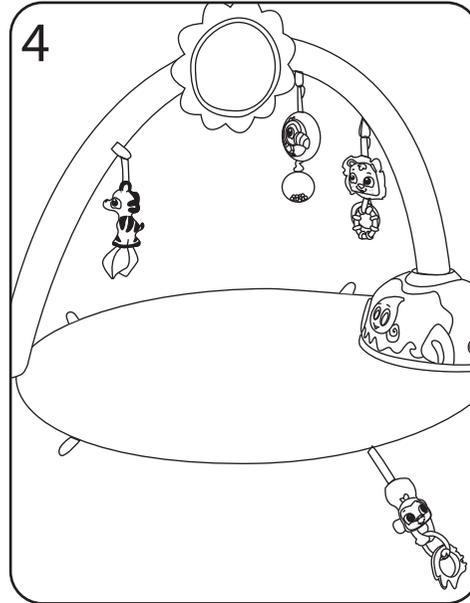

Add the attachments on the arch or around the mat with the hook and loop fasteners.

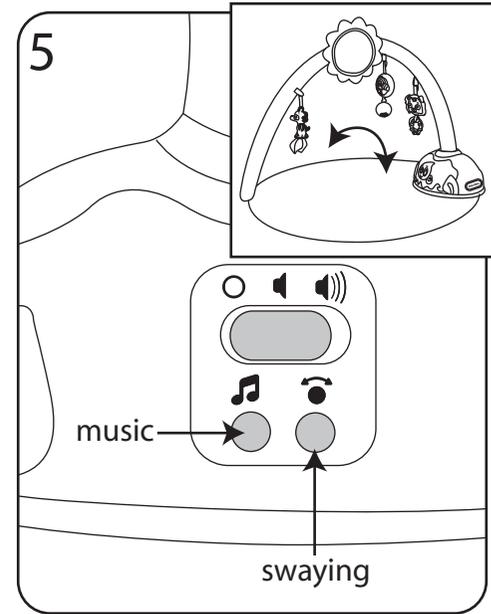

Turn the base to low or high volume.

○ OFF ◀ LOW VOLUME ▶ HIGH VOLUME

- Press the swaying button once to make the arch move forward and backward over the mat. After 2 1/2 minutes, the swaying will stop. To stop the swaying at any time during the cycle, press the button again.
- Press the music note button to play songs. After 10 minutes, music will stop playing. To stop the music at any time during the cycle, press the button again.
- Press the swaying button after pressing the music button, and the swaying will continue throughout the music cycle.
- Always turn the base OFF (O) after playing to conserve battery power.

⚠ WARNING:

- Adult supervision required. Do not leave baby unattended while using the gym.
- Do not expose the unit to moisture of any kind. Wipe the unit with a damp cloth to clean.
- Always use the gym on a flat, level floor.
- Do not add strings or other ties to the gym to prevent entanglement.
- Never place the gym in a crib. Always use in an open area.
- Keep hair and loose clothing items away from the swiveling base.
- Only use the bolster pillow during tummy time. The pillow should not be on the mat at any other time.

BATTERY SAFETY INFORMATION

- Charging of rechargeable batteries should only be done under adult supervision. Use only size "AA" (LR6) alkaline batteries (4 required).
- Never mix old batteries with new batteries, rechargeable (nickel-cadmium) or carbon zinc with alkaline batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the product before recharging.
- Charging of rechargeable batteries should only be done under adult supervision with batteries removed from product.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.