



Illustrations are for reference only. Styles may vary from actual contents.

Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

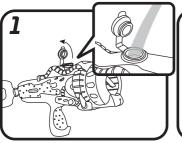


Open the flap on the plug on top of the Spray Blaster and fill it with water. Then, close the plug.

QUICK START

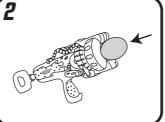

Hold the Spray Blaster in an upright position and insert a Power Pod.

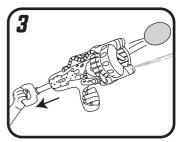

After loading a Power Pod, pull the handle all the way back to launch it! Water will spray from the front.

MONSTER TARGET

Pop out the monster on the box. Then fold the sides so it can stand. Place in an area away from fragile objects, and use it as a target.

* Do not use the water feature with the target to avoid damaging it.



<u> MARNING</u>

- Adult supervision is required when children are playing around water.
- Do not allow children to play with water near an electrical source or apparatus in order to avoid electric shock and/or electrocution.
- Do not leave items filled with water near electrical devices.
- This item is not suitable for children under the age of three.

IMPORTANT INFORMATION

- Before playing, make sure the area is open and free of obstacles.
- Never launch the Power Pods at anyone's eyes or face.
- After loading the Blaster, keep it in an upright position so the Power Pod doesn't fall out.
- Only use water with this product, as other liquids may cause irreparable damage.
- Only pour water from the plug on top of the Blaster. Do not immerse completely in water.
- After playing, thoroughly drain the water from the Blaster and allow it to air dry before storing.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



Little likes Consumer service MGA Eni 2180 Barlow Road 50 Presle Hudson, Ohio 44236 U.S.A. 8upport 1-800-321-0183 support

MGA Entertainment UK Ltd. 50 Presley Way, Crownhill, Milton Keynes, MK8 OES, Bucks, UK support@LittleTikesStore.co.uk Tei: +0 800 521 558 MGA Entertainment (Netherlands) B.V. Baronie 68-70, 2404 XG Alphen a/d Rijn, The Netherlands Tel: +31 (0) 172 758038 E-mail: Klantenservice@mgae.com

Suite 2.02, 32 Delhi Road

1300 059 676

Macquarie Park NSW 2113