 


TOBI™ 2 ROBOT SMARTWATCH

Your robot smartwatch can do so much! Tobi™2 has moving arms and legs with over 100 expressions and tons of interactivity! Take photos and film P.O.V. videos with dual cameras, track steps with the built-in pedometer, select a cool watch face to display, and play a variety of fun games! Tobi™2 is the only robot smartwatch that Comes to Life Before Your Eyes™!

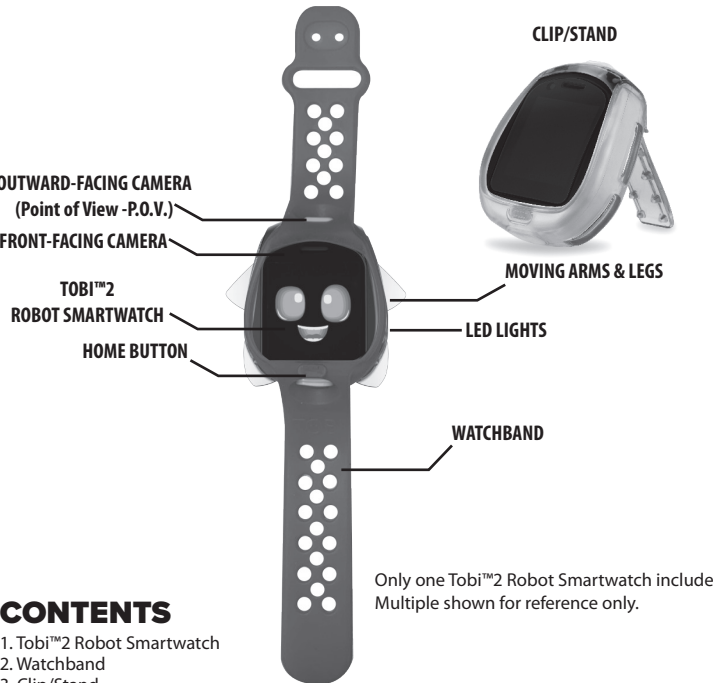

CONTENTS

1. Tobi™2 Robot Smartwatch
2. Watchband
3. Clip/Stand
4. Micro-USB Cable

To turn on the device, press and hold the home button for about 5 seconds until the screen turns on and a sound plays.

Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, tags and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

SPECIFICATIONS

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German, Italian, Polish
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 QR Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable)
Battery Life	Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	2402MHz-2480MHz
Max. Radio Frequency Power Transmitted	-2.3dBm

MICRO-USB PORT

NOTE: An adult must charge the device and connect to a computer.

Use the included **Micro-USB Cable** to connect the device to your computer to transfer photos and videos, charge the device and update the firmware.

 
1. Open the cover over the Micro-USB port on Tobi™2.
2. Insert the Micro-USB side of the cable into the USB port on your computer.
3. Insert the large USB end into a USB port on your computer.

BATTERY CHARGING

Prior to use, it is recommended that you fully charge Tobi™2 for optimal performance.

NOTE: The device should be OFF prior to charging. To power OFF, hold the home button for about 5 seconds, until a sound plays and the device shuts off.

1. Remove the watchband or clip/stand from around Tobi™2.
2. Insert the larger end of the Micro-USB cable into a USB port on your computer.
3. Lift open the cover over the Micro-USB port on Tobi™2 and insert the Micro-USB cable into the port.
4. A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.
5. You can now turn on the device, add your favorite accessory and begin playing.

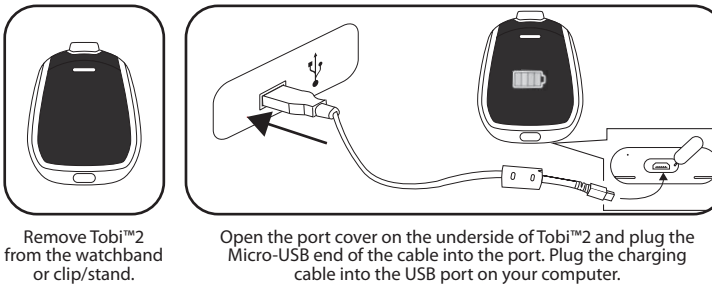

NOTE:

- See page 24 for more **BATTERY INFORMATION**.

SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

STARTING UP TOBI™ 2 ROBOT SMARTWATCH

To turn on the device, press and hold the home button on the front of the device for about 5 seconds until the screen turns on and a sound plays.

When you first start the smartwatch, ensure the firmware is up-to-date. Make sure the device is fully charged (see page 4). To begin, you'll be prompted to set the language, date format, time, and name of the device. For more information on how to set these features, see **SETTINGS** on pages 15-16.

FIRMWARE UPDATE

Before beginning, it is important to check for any available firmware updates so that Tobi™2 is operating optimally. To update the firmware on your device:

1. On your computer, visit WWW.LITTLETIKES.COM/TOBI2 and download the Firmware Installer.
2. Turn off Tobi™2. To turn off the device, press and hold the home button on the front of the device for about 5 seconds until a sound plays and the screen turns off.
3. Follow the steps on page 4 to connect the Micro-USB Cable to Tobi™2 and your computer.
4. A charging icon will show on the device's touchscreen. Quickly tap the screen 5 times to unlock. Then, an unlock icon will appear on the device's touchscreen.
5. On the Firmware Installer, click on Firmware Update. A progress bar will appear on your computer's screen, or, if your watch is up-to-date, it will say "Firmware is up to date." If it is up-to-date, properly eject the device from your computer.
6. Once the progress bar on your computer shows it is complete, properly eject the device from your computer. Then, remove the Micro-USB Cable.
7. Turn on Tobi™2. To turn on the device, press and hold the home button for about 5 seconds. A firmware update screen will be displayed on the device. Press the check mark and wait for the progress bar to finish loading to complete the firmware update.
8. The Parental Control screen will be displayed after the firmware has been updated. Follow the steps on page 17 to create a passcode, control wireless connectivity and set a screentime limit.

NOTE: After Tobi™2 cycles back on, it is recommended you turn the device off and back on again to confirm the update was successful.

WAKING UP TOBI™ 2 ROBOT SMARTWATCH

 
After about 25 seconds of inactivity, the touchscreen will go dark. If you're wearing Tobi™2 Robot Smartwatch on your wrist, raise your arm and turn the device toward you to wake it up and light up the touchscreen. If Tobi™2 is in the clip/stand, lift Tobi™2 to light up the touchscreen. You can also press the home button once to wake up the device.

WIRELESS CONNECTIVITY

Your Tobi™2 Robot Smartwatch can connect to other Tobi™2 Robot Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS**. Make sure wireless connectivity is toggled to the ON position (button turns blue). Now, you can share photos and message with other Tobi™2 users. Users must be close by to connect over wireless connectivity. For example, about 50 ft. (15m) or less unobstructed. The device must also have sufficient battery power to connect wirelessly and share photos and messages. **NOTE:** Wireless connectivity is only compatible with other Tobi™2 smartwatches, and will not connect to other devices or other Tobi™ versions. Users receiving messages must accept the message from their device before they can view it.

USING THE DUAL CAMERAS

There are two cameras on Tobi™2 Robot Smartwatch, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 18-19.

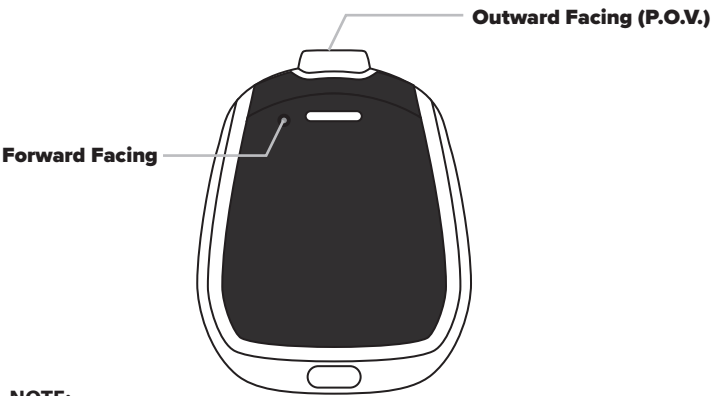

NOTE:

For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

TRANSFERRING FILES FROM TOBI™ 2

The device should be OFF prior to transferring files. To power OFF, hold the home button for about 5 seconds until a sound plays and the screen turns off.

Plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4.

On your computer, you will see a removable drive called TOBI2. Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in these folders to the desired location on your computer. **TIP:** Photo and video files will not be deleted from Tobi™2 until you manually delete them on the device by pressing the trash can icon in the photo and video apps.

You cannot load photos or videos from other devices onto Tobi™2, as the file types may not be compatible.

NOTE: Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

WEARING TOBI™ 2 ROBOT SMARTWATCH

As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat, soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

 
Avoid wearing the watchband too tightly, which may also contribute to skin irritation. The band should not be too loose so that it does not stay in place properly, but it should also not be so tight that is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with Tobi™2 Robot Smartwatch.

USING THE CLIP/STAND

In addition to wearing Tobi™2 Robot Smartwatch on your wrist, you can use the included clip/stand to attach Tobi™2 to your clothing or use it as a display stand on a table. Tobi™2 will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband.

TIP: For both the watchband and the clip/stand, make sure Tobi's arms and legs are able to move in and out of the casing. Ensure a proper fit before use.

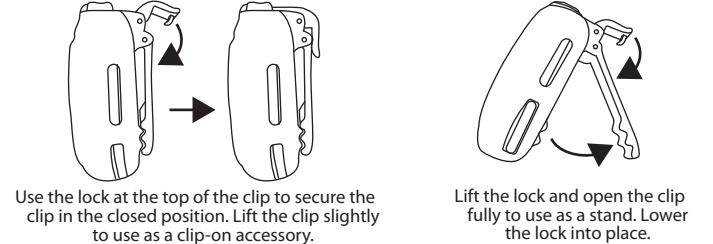

HOME BUTTON

 
Press and hold the home button on the front of the smartwatch for about 5 seconds to turn it on.

Once the smartwatch is turned on, press the home button once to rotate the display between **TOBI MODE**, **MENU MODE** and **WATCH SCREEN MODE**.

From **TOBI MODE**, press the home button to switch to **MENU MODE**.

From **MENU MODE**, press the home button to switch to **WATCH SCREEN MODE**.

From **WATCH SCREEN MODE** press the home button to switch to **TOBI MODE**.

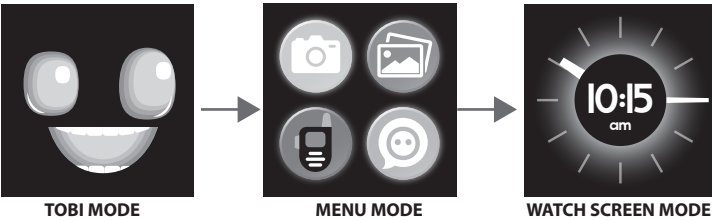

QUICK MENU VIEW

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity, daily steps, and battery charge level. Swipe up to make this quick view menu disappear or it will disappear after a few seconds. Tap on the volume or wireless connectivity icons to make changes to those settings.

NOTE: The quick view menu will not appear by swiping down on the screen while Tobi™ is listening to you in Tobi™ Mode.

TOBI™ MODE

Press the home button on the front of the smartwatch to rotate the display to **TOBI™ MODE**. Tobi™2 Robot Smartwatch does so many fun things and has over 100 expressions!

1. When you touch the screen in Tobi Mode, Tobi's arms and legs will move!
2. Shake Tobi around to make Tobi dizzy!
3. Leave Tobi alone and watch Tobi yawn or get annoyed.
4. Swipe right to tickle Tobi and make Tobi giggle.
5. Swipe left to make Tobi annoyed!
6. Swipe up to open **Nurture Menu**. Interact with Tobi™ with different features.
 - Nurture Food: Click on the food item and press the check mark to feed your Tobi™.
 - Tobi™ Nurture: Click on an icon and press the check mark to interact with Tobi™.
 - Tobi™ World: Decorate rooms. See page 14 for more information.
 - Tobi™ Talk: Try saying, "Hi Tobi!" or asking a question to see Tobi's response. Swipe down, left, or right on Tobi's face to disable the listening mode.
7. Press and hold Tobi's mouth to select a treat to feed Tobi! Select a food by pressing on the treat. Then, press the green check to feed it to Tobi.
8. Sometimes Tobi will suggest a game to play or an app to use with a speech bubble icon. Click on the icon to open the app Tobi suggests. This will also boost Tobi's happiness on the stat bar (see **STATS** on page 14).

PLUS SO MUCH MORE! What else can Tobi™2 Robot Smartwatch do?

MENU MODE

Select from a variety of action-packed games, activities, and dual P.O.V. and selfie cameras! Press the icons on the screen to open up sub-menus (indicated by an arrow next to the icon).

To exit a menu selection, press the home button.

 
There are four main menu screens, and three sub-menus for games, fitness games/tracking, and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.



To access the Nurture Menu, swipe up while in Tobi™ Mode. See page 8 for more information.

BRAIN GAMES MENU

Head-to-Head Gaming: For two-player games, you can play with other Tobi™2 users. Choose two players when prompted and the device will search for another Tobi™2 user. When prompted, the device will ask to accept the connection.

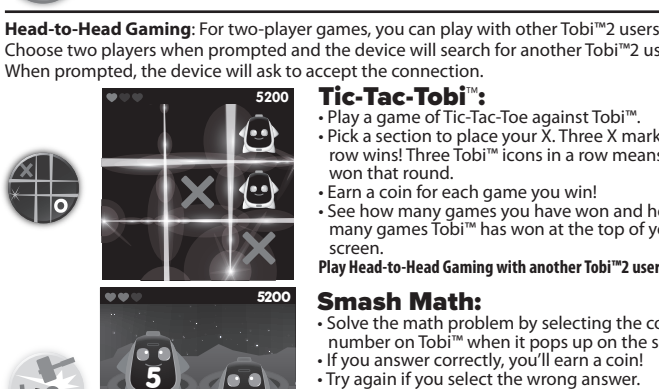

Play Head-to-Head Gaming with another Tobi™ 2 user.

Smash Math:

- Solve the math problem by selecting the correct number on Tobi™ when it pops up on the screen.
- If you answer correctly, you'll earn a coin!
- Try again if you select the wrong answer.

Tobi™ Time:

- Match the digital time to the analog time on the screen to earn coins.
- The clock will select a random analog time.
- Touch the digital numbers. Then, press the arrows above and below the digital numbers to enter the time shown on the analog clock.

• When you think the time you have set is correct, press the blue check mark to submit your answer.

• Tobi's face will show up on the clock smiling to let you know if you're correct or frowning if you didn't get the correct time.

• A new clock time will appear, so keep playing! Earn coins as you enter the correct time!

Match Match:

- Match the images before the time runs out.
- Tap on two cards to flip them over.
- If they match, you will earn a point.
- If they don't match, they will flip back over and you will have to try again.

Robot-o-Box:

- Box against an opponent to earn coins.
- While wearing the watch, punch into the air to hit your opponent. Each hit counts as a point.
- You will earn coins for each round you win.

IMPORTANT: Always play in an open area, away from objects or people.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

FITNESS MENU

Walk n' Wonder:

- Start walking around with your smartwatch.
- Walk around until target objects appear.
- Match pictures in the center square to moving objects with this augmented reality game.
- When you match the picture to the object, tap the center square to "catch" it.
- For each correct catch, earn coins!

Freeze Dance:

- Dance until the music stops!
- When the music stops and Tobi™ is on screen with a stop sign, make sure to freeze!
- Don't move while the music is playing.
- Don't stop moving while the music is playing.
- Earn a coin for each minute of play when you freeze at the right time! If you are still dancing when the music stops, if you stop moving while music plays, the clock will go back to 0!

Tobi™ Says:

- Watch the move that Tobi™ wants to you copy.
- Perform that move the number of times that the screen shows.
- The number will count down as you perform the move repetitively.
- Earn coins for completing moves!

Robot-o-Box:

- Box against an opponent to earn coins.
- While wearing the watch, punch into the air to hit your opponent. Each hit counts as a point.
- You will earn coins for each round you win.

IMPORTANT: Always play in an open area, away from objects or people.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

STATS

Stats:

- See how happy Tobi™ is with your interactions!
- Interact with Tobi™ in Tobi™ Mode to increase this stat bar.
- Play and win games to increase this stat bar.
- Meet your step goals, walk and play fitness games to increase this stat bar.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

RE

SETTINGS

Device Name, Remote Control, Parental Control

Tobi™2 Device Name:

- Your device is named Tobi™2 by default, but you can add onto Tobi's name to customize it!
- Should you choose a new name, press the minus and plus icons to select a letter.
- Press the letter to set it.
- Press the X to clear the letter you've selected.
- Press the green check mark to save your new device name.

NOTE: Your device name will always start with TOBI2. The first four letters and one number 1-0-8-1-2 cannot be erased.

Remote Control:

- Connect to either Tobi™2 Director's Camera or Tobi™2 Interactive Karaoke Machine (**sold separately**).
- To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Blue] position).

PARENTAL CONTROL

After entering the passcode, press the check mark and cycle through each setting by swiping left or right on the screen. Then, make the appropriate changes.

Create Passcode:

Creating a passcode is optional.

- To create a passcode, tap on the star keys to change the numbers. Then, press the check mark to set the passcode.

NOTE: To reset the passcode, press and hold the lock icon for five seconds.

Wireless Connectivity:

- Use the toggle button to turn wireless connectivity on (blue) or off (red).
- To allow another Tobi™2 Robot Smartwatch to connect, enter the passcode and press the check mark when the device's name displays on the screen.

Screentime:

- To set a time limit, follow the below steps. By default, there is no time limit set.
- Use the toggle button to turn screentime on (blue) or off (red).
- Tap on the time bar. It will cycle between 00:30, 1:00, 1:30, 2:00, 2:30, 3:00, 3:30, 4:00, 4:30, 5:00, 5:30 and 6:00.
- Screentime will lock Tobi™2's Mode and Games, but you will still be able to access Watch Screen Mode when the time is up. **NOTE:** When the time is up, it will ask for the passcode in order to allow additional time. Tap the time bar and press the check mark to allow more time.

Activity Tracker:

- View your daily activity steps.
- Set a step goal by clicking on the target icon.
- Set a target step goal by pressing the + and - icons.
- Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps.
- Press the green check mark to set your goal.

REMEMBER: Always consult a doctor before starting new physical activities.

Activity Tracker:

Monday

8,326 / 10,000

Activity Tracker:

Monday

8,326 / 10,000

CAMERA

REMEMBER: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

Camera:

- Take selfies or point of view (P.O.V.) photos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the shutter button to take your picture.

Selfie Gesture: Activate the selfie and timer with a simple hand gesture. Slightly twist your wrist two times and on the second twist, look at the smartwatch's forward facing camera.

NOTE: This gesture only works if the camera is open.

Camera:

- To access the video camera, swipe left or right.
- Record selfies or P.O.V. videos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the record button screen to start and stop recording your video.

Camera:

- To access the video camera, swipe left or right.
- Record selfies or P.O.V. videos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the record button screen to start and stop recording your video.

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

CALENDAR & TIMER

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

TROUBLESHOOTING

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device still does not work, charge the battery (see page 4) and follow the steps above.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

Troubleshooting:

- Turn the power OFF by pressing and holding the home button until the device turns off.
- Turn the device back ON by pressing and holding the home button until the device turns on.
- NOTE:** If the device screen still does not work, charge the battery (see page 4) and follow the steps above.
- TIP:** Use the tip of your finger rather than your finger nail for best results using the touchscreen.

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant